

FFA-3

Front Flame Adapter

GAS FIRE LOGS

Hargrove

Installation Instruction:

1. Insert the "Guide Wire" into the desired Firepan Gas Port.
2. Slide the flared end of the Front Flame Adapter (tube) then the spacer over the guide wire. Next, slide the clamp down the tube so that the clamp wraps around the Firepan gas pipe.
3. Using the bolt supplied, screw the Front Flame Adapter to the Firepan burner gas pipe. Make sure the Front Flame Adapter will not move - thus loosening it's position in relation to the firepan gas port. Pull the Guide Wire from the tube - plyers may be needed.
4. Fill the Firepan with sand (vermiculite if propane gas) provided with the Hargrove Accessory Kit.
5. It is not necessary to have the front port of the Front Flame adapter covered with sand. You can adjust or modify the flame height by using the embers supplied in the Hargrove Accessory Kit.

Fig.1

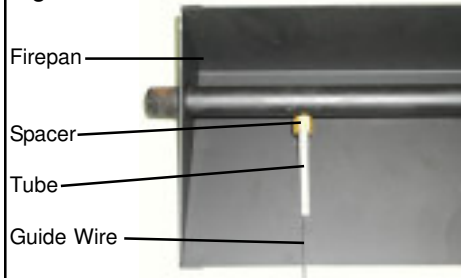


Fig.2

